
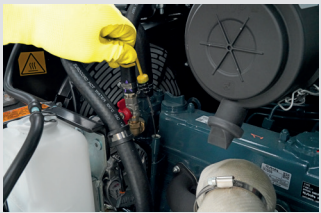



BULL 200







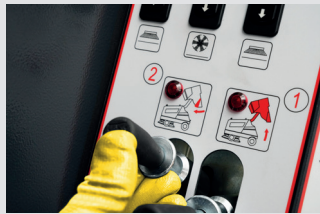




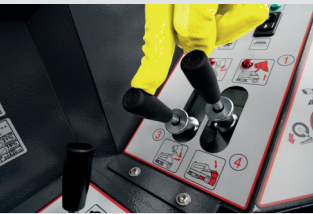
MAINTENANCE SCHEDULE




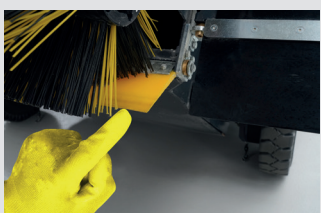
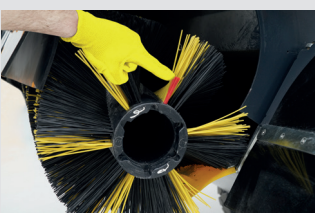




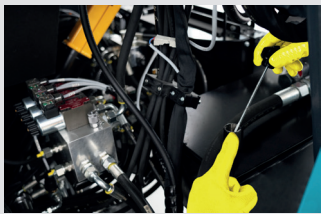
BEFORE USE CHECKLIST

		
1. Check fuel level.	2. Check engine oil level.	3. Check cooling fluid level.

DAILY CHECKLIST

					
1. Take the machine to a suitable waste disposal area.	2. Activate the handbrake.	3. Close the vacuum system.	4. Clean the filter.	5. Raise the hopper to the required height (max. high dump height 1.580mm).	
					
6. Open the hopper door and empty out the dirt that has been collected.	7. Inspect and clean the main brush and side brushes (including the optional extendible front brush). Ensure that there is no string or wire wrapped around the brushes and that the bristles are intact.			8. Lower the hopper.	9. Close the hopper door.

WEEKLY CHECKLIST

					
1. Clean the engine air intake filter.	2. Inspect the dust skirts for wear or damage.	3. Check the condition of the main and side brushes (including the optional extendible front brush). If necessary, adjust or replace them.			4. Check that the gaskets which seal the hopper are intact and in good condition.
		If any of these parts are worn or damaged, replace them or contact technical support.			
5. Verify the integrity of the filter.	6. Check hydraulic oil level.				